

USE AND CARE INTRUCTIONS

For M-300 Millennium Tree Seat

(WARNING)

M-300 Millennium Tree Seat is intended for use with your feet on the ground. Do not use the M-300 Tree Seat in an elevated position or in any situation where failure of seat could cause injury. Failure to follow these directions could result in serious injury or death.

USE

1. With the Tree Seat in the folded position place the back of the Tree Seat against the tree approximately 6 inches above the height you would like to sit.
(WARNING: Never position Tree Seat more than 24 inches above the ground.)
 2. Wrap the strap around tree making sure it is not twisted.
 3. Attach buckle to gutter hook and pull strap tight.
 4. Place both hands on top of Tree Seat and push down with as much force as possible this will seat the Tree Seat and tension the strap.
 5. Check the buckle and make sure it is properly connected to the gutter hook and make sure the top and bottom of seat are making firm contact with the tree.
 6. Release the bungie, fold down seat and enjoy your hunt.
-

CARE

1. Before each use inspect the Tree Seat to make sure there are no loose bolts, rivets or nuts. Also check the webbing and seat for any fraying or tears.
2. The hinge on the Tree Seat has a hole in the center for oiling. The hinge should be lubricated annually with a Teflon-based lubricant such as Tri-Flow.

If there is any part of these instruction you do not understand or you have any questions contact:

Millennium Outdoors 201 Fairmont Plaza Pearl, MS 39208
Phone 601-932-5832 Fax 601-932-0068
Visit us on the web millenniumstands.com