



MILLENNIUM UNIVERSAL BLIND PLATFORM Q-300 INSTRUCTION MANUAL



Should you have any questions about the installation and/or use of this product, or any other Millennium product(s) do not hesitate to call one of our customer service representatives at (601) 932-5832 or visit us online at millenniumstands.com. Our service representatives will answer any questions you may have about any of the complete line of Millennium products.



WARNING! This product carries strict weight limitations. Do not use this product if you exceed this total weight limitation. Please note this weight limit includes the user and equipment. Failure to follow these instructions may result in serious injury or death!

Model Number Q-300 Universal Blind Platform

Maximum Capacity: Blind 600 lbs.

Maximum Capacity : Hunter and Gear 550 lbs.

Thank you for your purchase of this quality Millennium product! To ensure your personal safety, please take a moment to carefully read this product Instruction Manual in its entirety before attempting to set-up, install and/or otherwise use this Millennium product. Failure to do so could result in serious personal injury or death! This Millennium product has been designed, engineered and manufactured to provide you with years of trouble free service.


MILLENNIUM UNIVERSAL BLIND PLATFORM

Some assembly is required prior to use of your Millennium Universal Blind Platform.

NOTE: All assembly should be performed with all the components laying flat on the ground.

Q-300 UNIVERSAL PLATFORM EXPLODED VIEW AND PART NUMBERS.

NOTE: All $\frac{1}{4}$ " bolts use # 28 flat washers and # 30 nuts and all $\frac{5}{16}$ " bolts use # 29 flat washers and # 31 nuts unless otherwise specified.

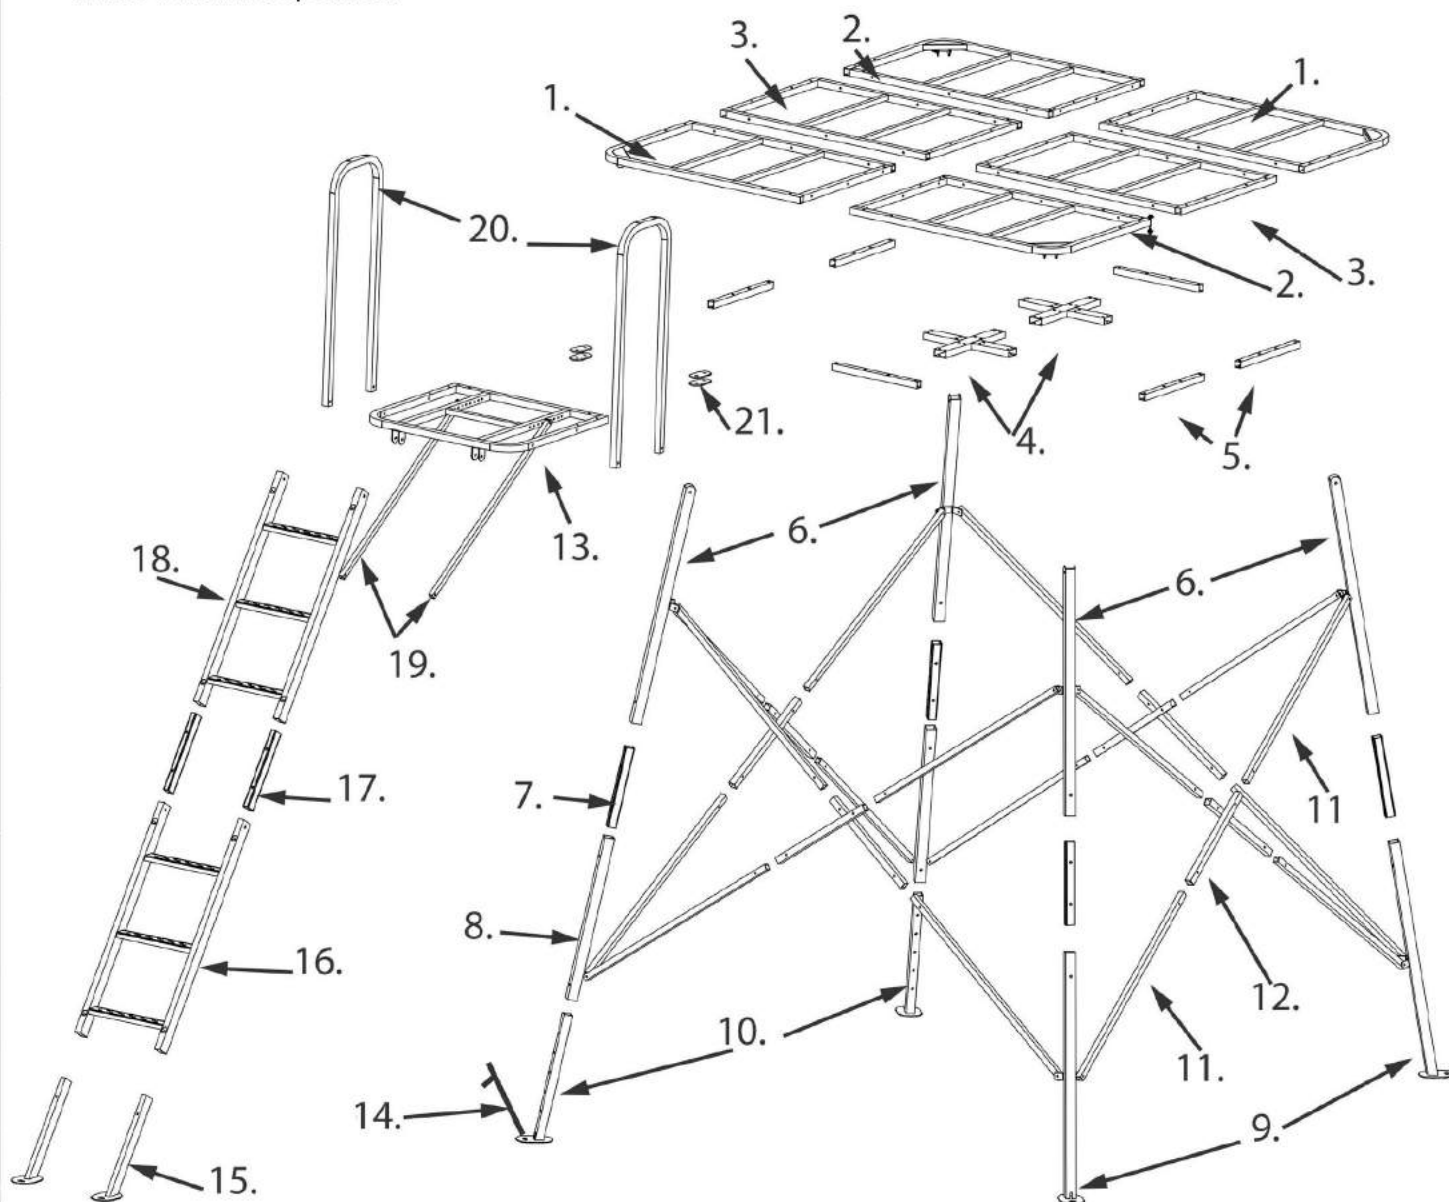

	Description	Part Number	Size	Quantity
1	Platform Corner (A)	Z-300-01		2
2	Platform Corner (B)	Z-300-02		2
3	Platform Middle Section	Z-300-03		2
4	T-Braces	Z-300-04		2
5	Platform Brace	Z-200-15		6
6	Top Leg Section	Z-300-05		4
7	Leg Connector	Z-200-23		4
8	Bottom Leg Section Adjustable	Z-300-06		2
9	Bottom Leg Section Non-Adjustable	Z-300-07		2
10	Adjustable Foot	Z-200-29		2
11	Cross Brace End Section	Z-300-08		16
12	Cross Brace Middle Section	Z-300-09		8
13	Ladder Landing Platform	Z-300-10		1
14	Ground Stake Anchor	Z-200-34		4
15	Bottom Ladder Extension	Z-300-11		2
16	Bottom Ladder Section	Z-300-12		1
17	Ladder Connector	Z-200-13		2
18	Top Ladder Section	Z-300-14		1
19	Ladder /Landing Platform Support	Z-300-15		2
20	Hand Rail	Z-200-18		2
21	Landing to Platform Connectors	Z-300-16		4
22	Hex Head Bolt	Z-123-58	¼" x 1-3/4"	32
23	Hex Head Bolt	Z-123-55	¼" x 2-3/4"	77
24	Hex Head Bolt	Z-123-28	¼" x 2-1/2"	4
25	Hex Head Bolt	Z-123-04	5/16 x 2-1/2"	10
26	Hex Head Bolt	Z-123-39	5/16 x 2"	16
27	Hex Head Bolt	Z-124-05	5/16 x 2-5/8"	4
28	Flat Washer	Z-123-46	¼"	226
29	Flat Washer	Z-123-11	5/16"	52
30	Ny-Loc Nut	Z-123-31	¼"	113
31	Ny-Loc Nut	Z-123-14	5/16"	30

Q-300 ASSEMBLY INSTRUCTIONS

Tools needed: Two 7/16" and two 1/2 "wrench.

Ratchet or battery powered impact wrench with sockets will speed the process.

If possible we suggest Step 1 thru 7 be performed at home or camp before taking to the field to avoid possibility of losing parts.

Platform Assembly

(Expanded metal removed for clarity)

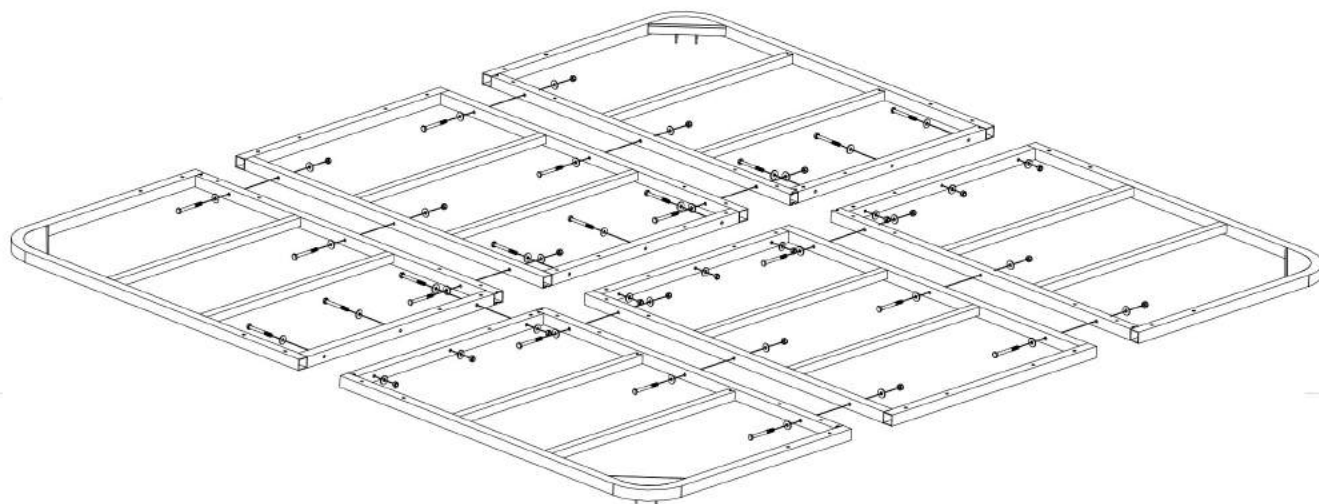


Figure 1.

Step 1. Bolt the 6 parts of the platform together using twenty one $\frac{1}{4}$ " x 2-3/4" bolts, forty two washers and twenty one nuts. Place washers under the head of bolt and nuts as seen in Figure 1.

Note: Loosely tighten the nuts at this time.

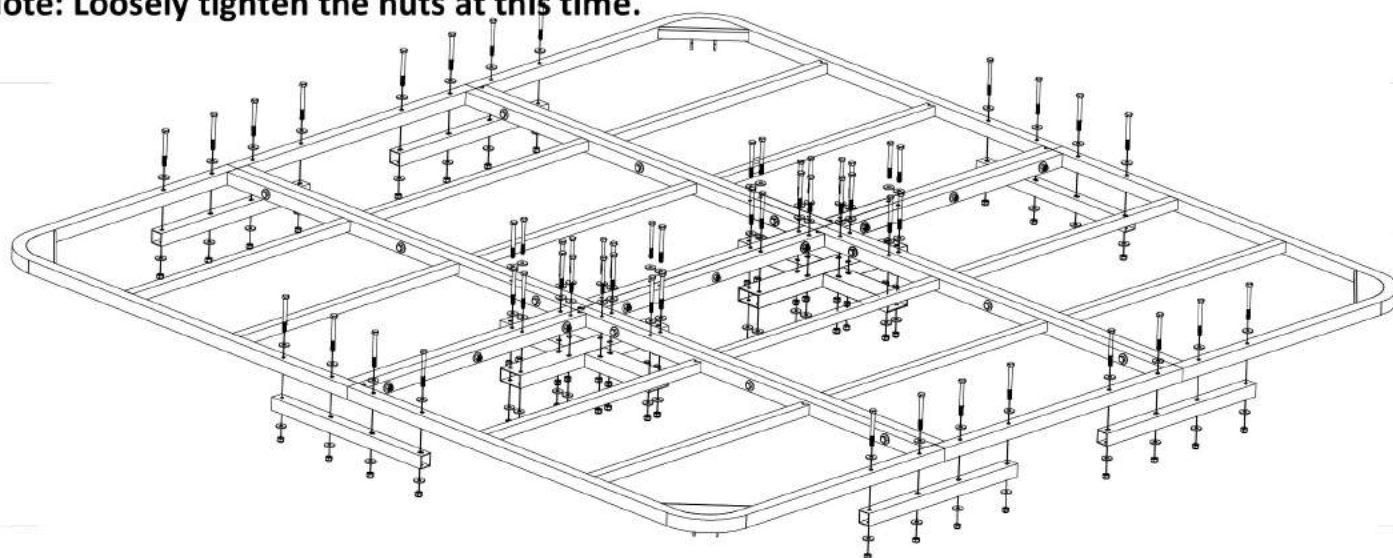


Figure 2.

Step 2. Install the six platform braces and two T braces using twenty two $\frac{1}{4}$ " x 2-3/4" bolts, forty four washers and twenty two nuts. Place washers under the head of bolts and under the nuts as seen in Figure 2.

Note: tighten all the nuts at this time.

Leg Assembly

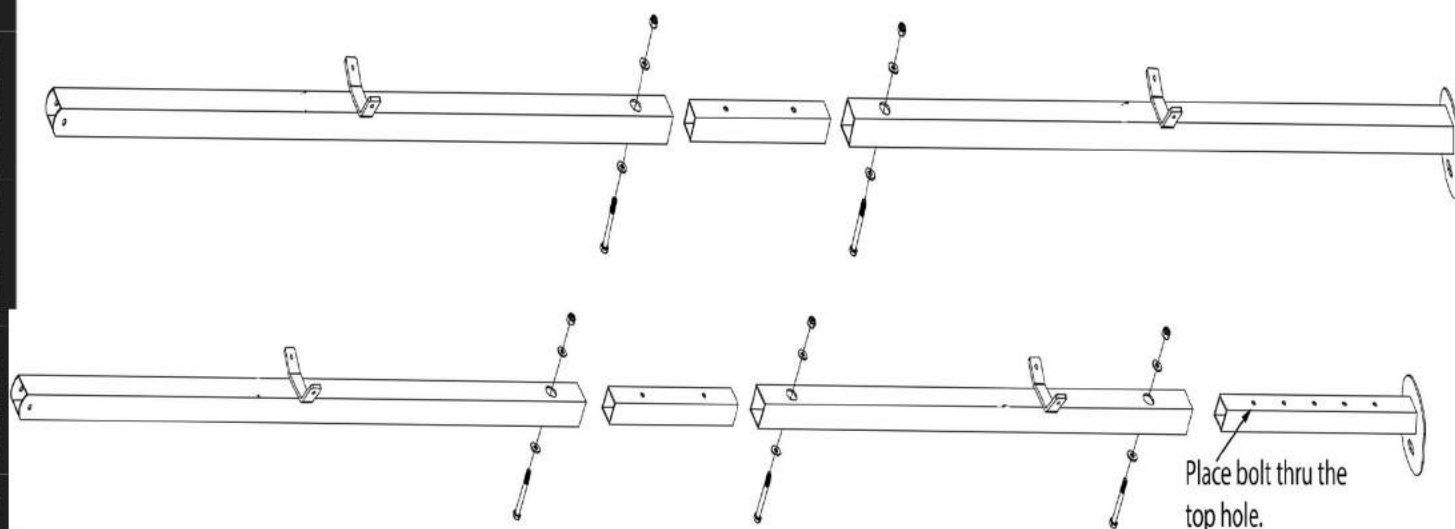


Figure 3.

Step 3. The platform comes with two type leg assemblies, two legs that are adjustable and two that are not. Use one leg connectors two 5/16" x 2" bolts, 4 washers and two nuts on each leg. Place washers under the head of bolts and under the nuts. Loosely tighten nuts then go back and tighten them.

Attach the adjustable foot with 5/16" x 2" bolt, two washers and one nut. Place washers under the head of the bolt and under the nuts. Be sure to use the top hole in the adjustable foot as seen in Figure 3.

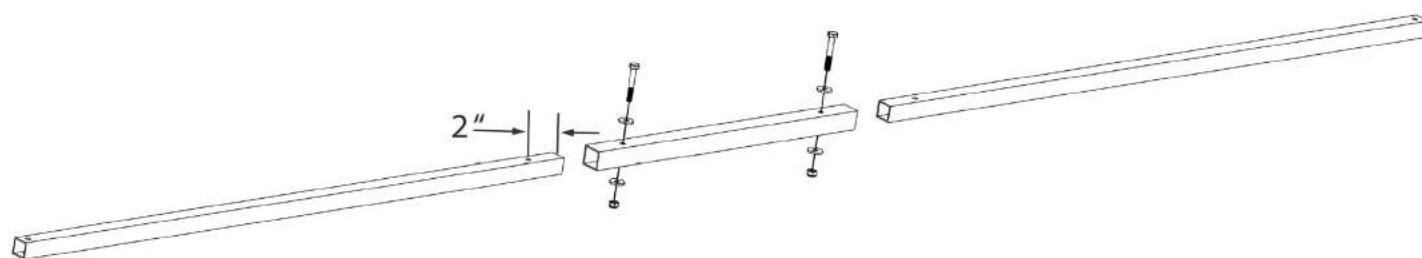


Figure 4.

Step 4. Assemble all the cross braces by sliding the end of the 7/8" tubes that has the hole 2" from the end inside the 1" tube and secure with two 1/4" x 1-3/4" bolts, four washers and two nuts as seen in Figure 4. Now try to pull the pieces apart to ensure that the bolt went thru the hole. Tighten the bolts at this time.

Ladder Assembly

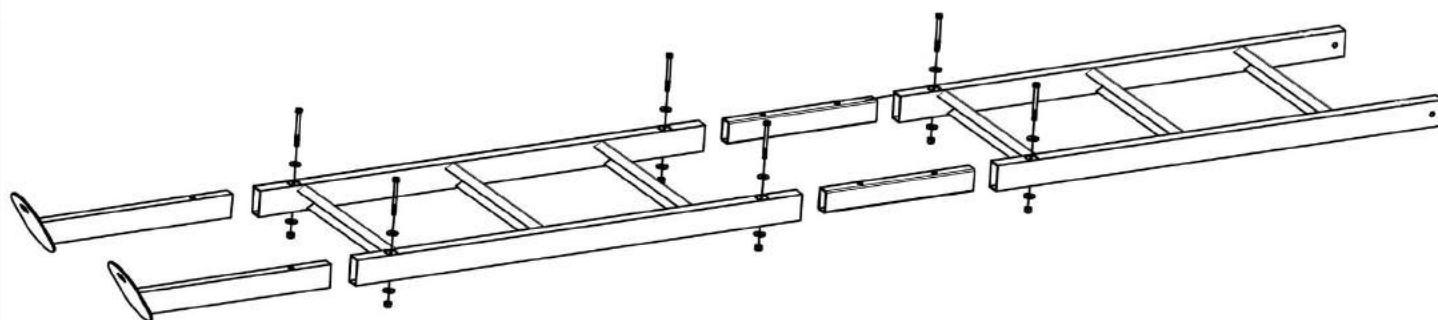


Figure 5.

Step 5. Assemble the two ladder sections together using two ladder connectors, four 5/16" x 2-1/2" bolts, eight flat washers and four nuts, placing washers under the head of bolt and under the nuts as seen in Figure 5. Attach bottom ladder extension using two 5/16" x 2-1/2" bolts, four washers and two nuts as seen in Figure 5. Snug all nuts then go back and tighten.

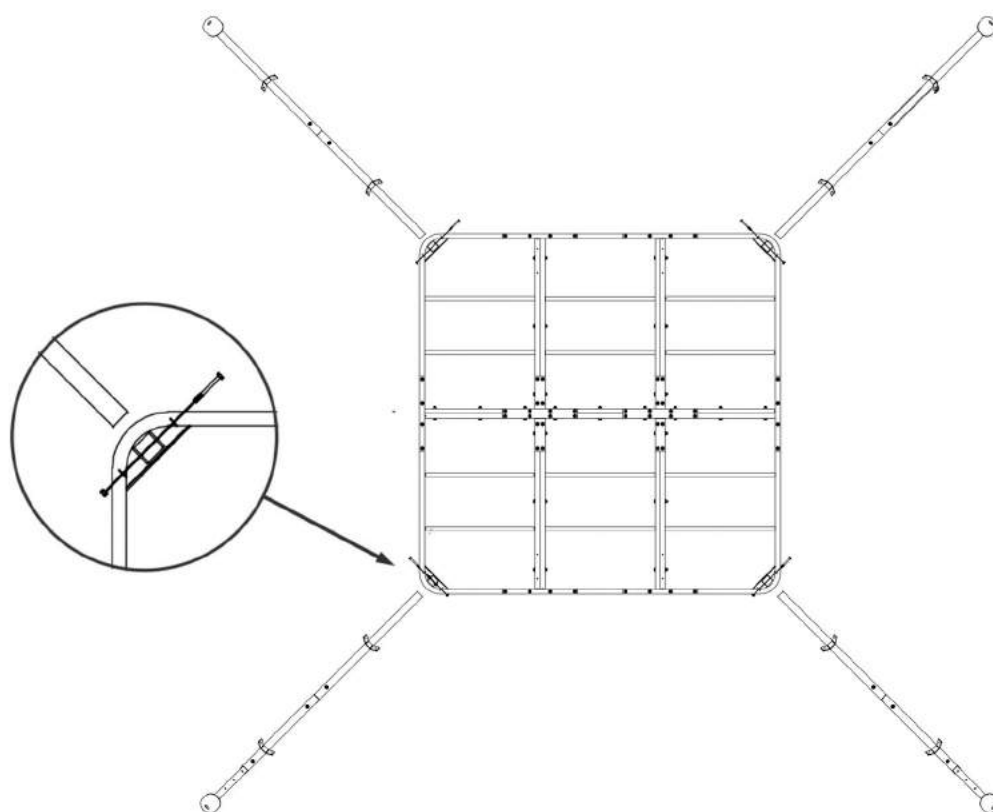


Figure 6

Step 6. Place the platform top down flat on the ground and attach all four of the legs using four 5/16 x 2-1/2" bolts eight washers and four nuts. Place washers under the head of the bolts and under the nuts as seen in Figure 6.

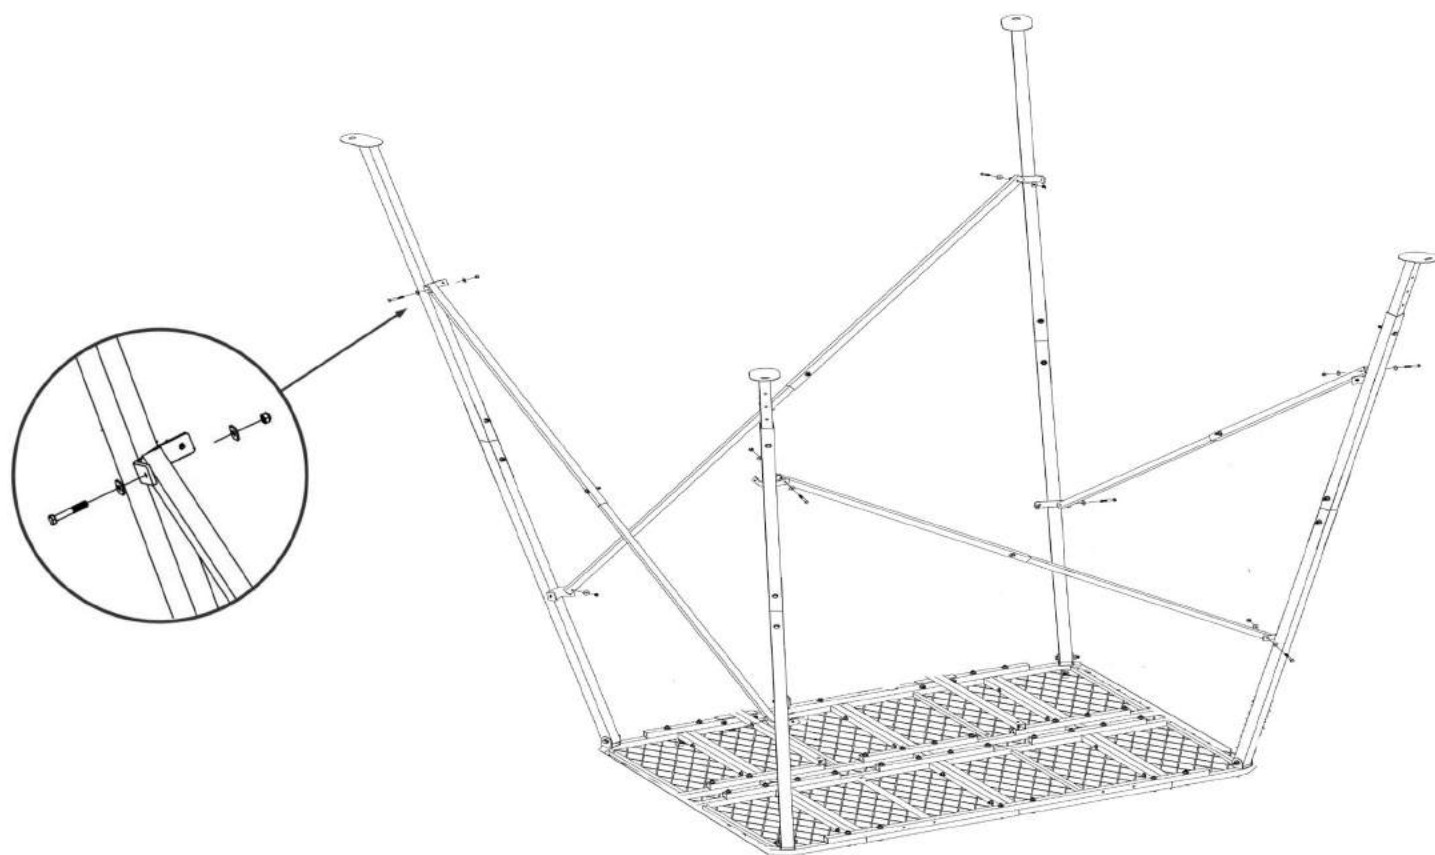


Figure 7.

Step 7. Installing the cross braces will require the help of 2 other people to prevent damaging the stand. Have two people lift and hold the legs and install one cross brace between all four legs placing them on the inside of the brackets using eight $\frac{1}{4}$ " x 1-3/4" bolts, 16 washers and 8 nuts. Place washers under the head of bolts and under the nuts as seen in Figure 7. Finger tighten the nuts at this time. **Do not release the legs until all 4 braces are attached.**

Step 8. Install the remaining four braces in the same manor except place them on the outside of the bracket, this will prevent the braces from touching where they cross. You can now tighten all the bolts.

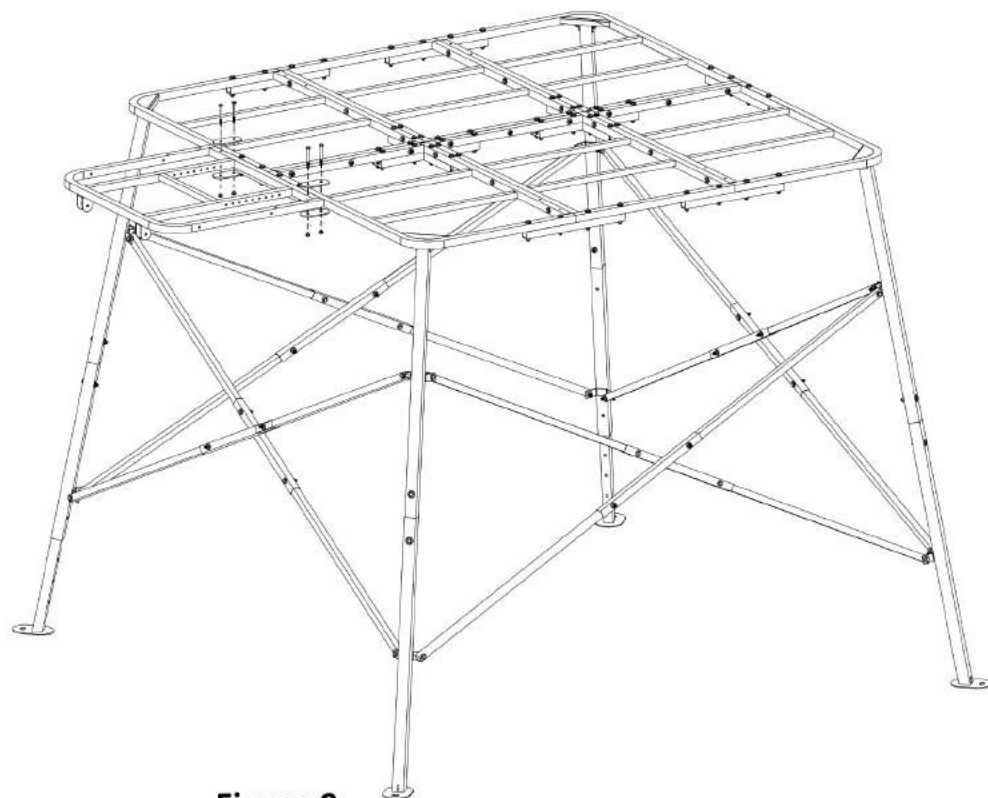
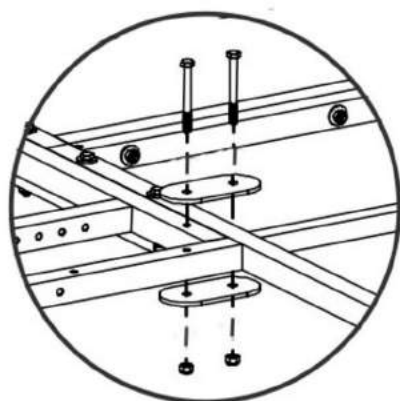


Figure 9.

Step 9. With all the cross braces installed and all bolts tight you can now stand the platform upright and install the small landing platform to the large platform in the desired position for your application. Use 4 landing to platform connectors four 5/16" x 2" bolts and two 5/16" nuts, no washers. There are holes in the landing platform for the bolts to go thru as in Figure 9. Bolts just go thru holes in expanded metal on the main platform.

Tighten all 4 bolts equally.

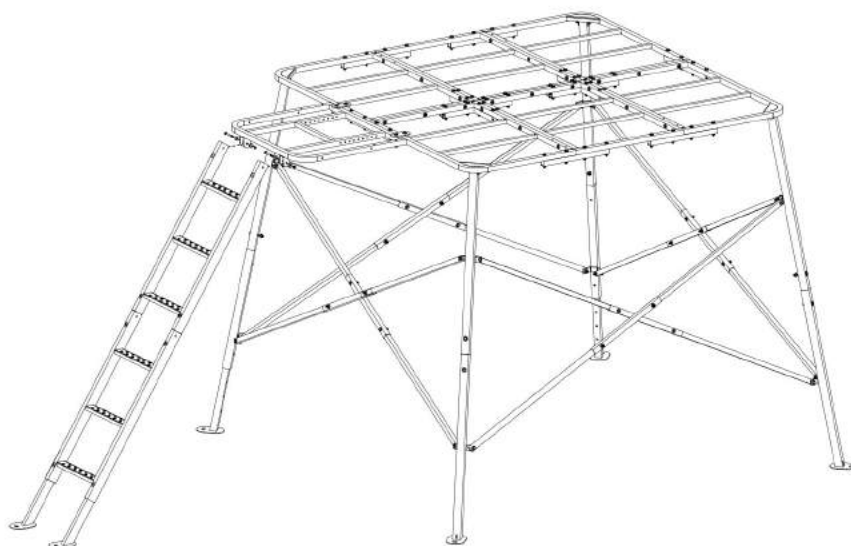
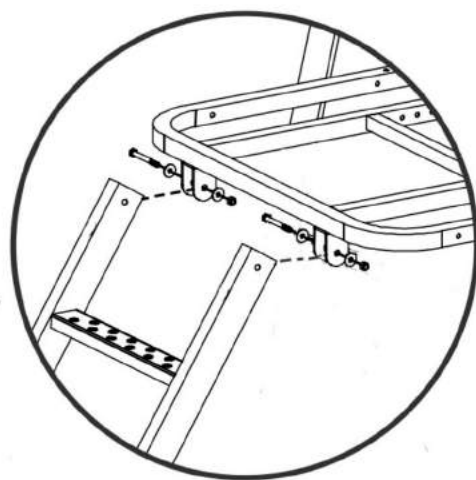


Figure 10

Step 10. Connect the ladder to the landing platform using two 5/16" x 2" bolts, four washers and two nuts, placing washers under the head of bolts and under the nuts.

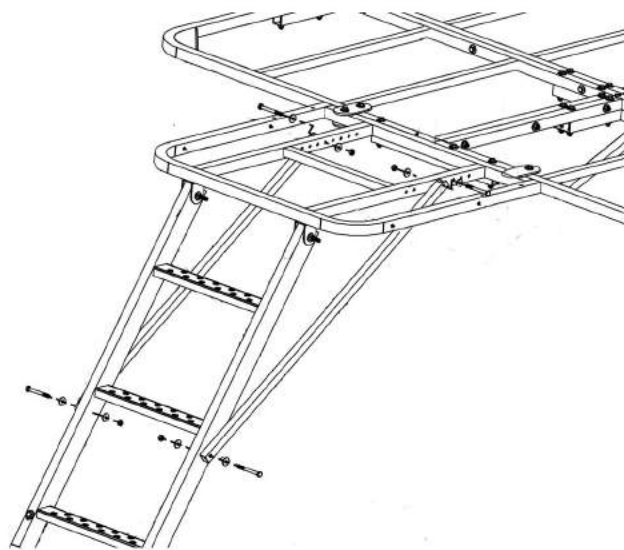


Figure 11.

Step 11. Make sure platform is level and ladder at the correct angle then install the two ladder braces using four $\frac{1}{4}$ " x 2-1/2" bolts eight washers and 4 nuts. Attach the bottom of the braces to the ladder first then the top to the corresponding holes as seen in Figure 11. Place washers under the head of bolts and the nuts.

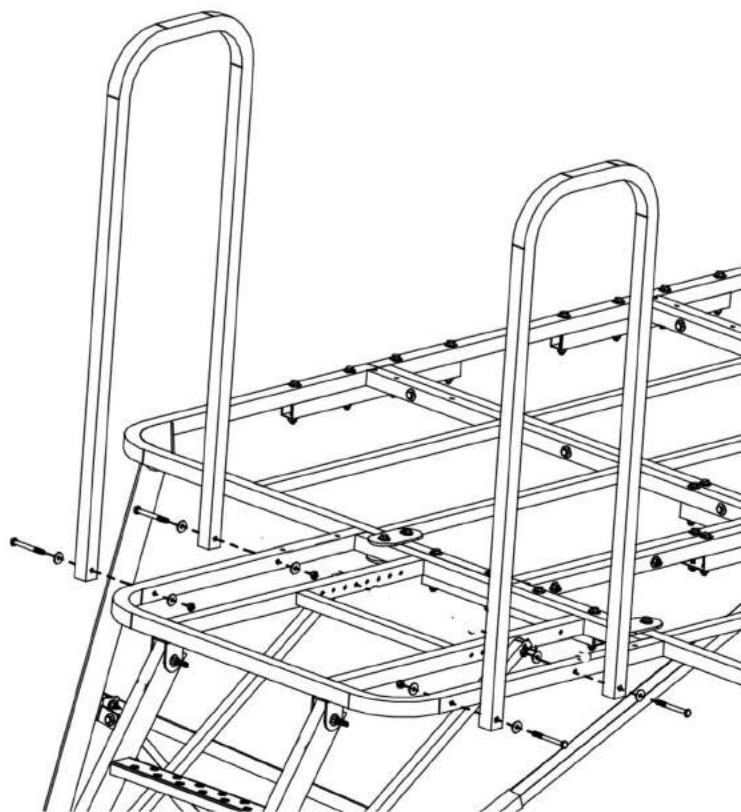


Figure 12.

Step 12. Install the hand rails using four $\frac{5}{16}$ " x 2-5/8" bolts eight washers and four nuts placing washers under the head of the bolts and the nuts as seen in Figure 12. Be sure to put the bolts in from the outside.

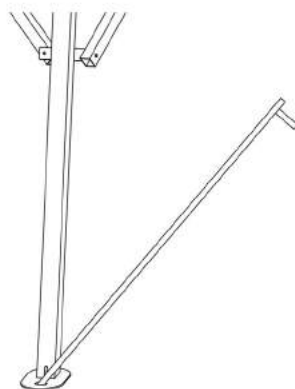































Figure 13.

Step 13. Anchor the platform to the ground with the 4 stakes that are included. There are slots cut in the feet of the platform so you can hammer the stakes in the ground at about a 45degree angle as seen in Figure 13.

Installing The Q-300 Universal Platform

-  **WARNING!** DO NOT use this, or any other product(s) to lean up against, prop against utility poles, telephone poles, structural columns or any other man-made structures. Never use this or any other product(s) around power generation (transformers, generators, substations, etc.) and/or power transmission equipment (power lines). Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Do not use this or any other product(s) if you have a history of heart problems, back problems, impaired vision, equilibrium problems, high blood pressure or any other physical impairment that may limit your ability to use and/or operate this product(s) in the safe manner outlined in this Instruction Manual. Additionally, do not use this or any other product(s) if you are currently taking any medication and/or substance, including alcohol, that may limit your ability to use this product(s) as outlined and described in this Instruction Manual. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Never attempt to either climb up or climb down with a weapon in your possession. ALWAYS unload your weapon and pull it up to hunting height using a tether or pull-up rope. ALWAYS lower your unloaded weapon down to the ground prior to attempting to climb down. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Never attempt to hunt from an unlevel shooting house. Additionally, never attempt to level your shooting house at heights above the ground. If you find that your shooting house is unlevel, canted, angled awkwardly upward or downward, or in any configuration other than level, immediately climb down to ground-level and readjust your shooting house as necessary to alleviate this awkward angle. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Thoroughly inspect this or any other product(s) prior to each use for signs of wear, rot, corrosion, cracks, deterioration and/or any other type of defect. Protect this product from extended exposure to direct sunlight, excessive heat or freezing temperatures. Do not use this or any other product(s) if it shows evidence of wear, rot, corrosion, cracks, deterioration and/or any other type of defect. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Falls from a shooting house can occur anytime after leaving the ground. These falls result in either serious injury or death! For your personal safety, please take a moment to carefully read this product Instruction Manual in its entirety before attempting to assemble, set-up, install and/or otherwise use this Millennium product. At least annually, review the contents of this Instruction Manual and watch the safety information included in the Quick Response (QR) Code(s) which accompanies this Millennium product(s). Additionally, keep these Instructions for the entire duration that you own this product(s). Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** The safe use and operation of this product is the sole responsibility of the user. It is also the sole responsibility of the owner to provide any person(s) who borrow or purchase this product with these Instructions. Failure to follow these instructions may result in serious injury or death! Additionally, failure to follow these instructions may subject you to personal liability penalties as determined by the U.S. Judicial system.
-  **WARNING!** Prior to each hunt, make sure that you have a signaling device (e.g., mobile phone, cell phone, radio, whistle, signal flare, Personal Locator Device [PLD], etc.) in your possession and on your person in an operable condition. This device must be within easy access should you experience the need to contact emergency assistance. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** You must have at least four (4) adults to install and/or remove shooting house. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Never install, set-up, or climb to your shooting house with a weapon. Use a pull up rope to carefully raise your unloaded weapon. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** You must check the ground under the shooting house to make sure it is firm and level. Sloping ground or uneven surfaces (e.g., one foot on a rock) can cause your shooting house to tilt or shift as you climb. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Do not attempt to use this or any other product(s) when thunderstorms are threatening and/or present within five (5) miles. Do not attempt to use this or any other product(s) when any other adverse weather condition presents itself. These include weather conditions which have the potential for producing winds, lightning, rain, snow, sleet and/or any other atmospheric condition which may limit the user's ability to operate this product(s) in a safe manner as described in this Instruction Manual. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** This product(s) is designed for adult use only! No one under the age of 16 should attempt to use this or any other product(s) without direct adult supervision. Failure to follow these instructions may result in serious injury or death!

-  **WARNING!** Do not attempt to use this and/or any other product(s) when ice, snow and/or freezing rain has deposited or formed on any portion of the tree you intend to climb. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Never attempt to either climb up or climb down with a weapon in your possession. ALWAYS unload your weapon and pull it up to hunting height using a tether or pull-up rope. ALWAYS lower your unloaded weapon down to the ground prior to attempting to climb down. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Thoroughly inspect this or any other product(s) prior to each use for signs of wear, rot, corrosion, cracks, deterioration and/or any other type of defect. Protect this product from extended exposure to direct sunlight, excessive heat or freezing temperatures. Do not use this or any other product(s) if it shows evidence of wear, rot, corrosion, cracks, deterioration and/or any other type of defect. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Prior to attempting to use this or any other product(s) you must take a moment and become familiar with its assembly, setup and installation. You must practice installing, setting-up and using this product(s) at ground-level prior to attempting to use it at heights above ground-level. Once you have become thoroughly knowledgeable and comfortable with this product(s) setup, installation and use at ground-level, you are now ready to use it at heights above ground-level. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** You must have at least four (4) adults to install and/or remove shooting house. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Never install, set-up, or climb to your shooting house with a weapon. Use a pull up rope to carefully raise your unloaded weapon. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** You must check the ground under the shooting house to make sure it is firm and level. Sloping ground or uneven surfaces (e.g., one foot on a rock) can cause your shooting house to tilt or shift as you climb. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Do not attempt to use this or any other product(s) when thunderstorms are threatening and/or present within five (5) miles. Do not attempt to use this or any other product(s) when any other adverse weather condition presents itself. These include weather conditions which have the potential for producing winds, lightning, rain, snow, sleet and/or any other atmospheric condition which may limit the user's ability to operate this product(s) in a safe manner as described in this Instruction Manual. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Some Millennium shooting houses are equipped with a footrest, armrests, backrest and/or shooting rail. Neither the footrest, armrests, backrest nor the shooting rail have been designed to support the users weight. Under no circumstances shall you place any more than fifteen (15) pounds (7 kg) of weight on these structures. Doing so will put the user in serious risk of injury or death. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** NEVER hunt out of a shooting house at heights at which you are not completely comfortable. Depending on the hunting conditions, choose the minimum hunting height that allows for safe, effective hunting. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Strict weight limitations have been set for each product(s) to ensure your personal safety. Note the weight limitations of your shooting house and that this weight limit includes the user(s) and their equipment. NEVER EXCEED THESE WEIGHT LIMITATIONS! Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Never jump or bounce on a shooting house or shooting house seat. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** DO NOT modify, fix/repair, alter, bend, cut, weld, drill or heat this product(s) in any way. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Replace any damaged or worn parts with original parts. Never store a shooting house or any of its components outdoors when not in use. To purchase genuine factory parts contact Millennium toll free at (601) 932-5832 or *millenniumstands.com*. Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Always wear the appropriate foot wear when using a shooting house. A good non-slip safety boot is important to your personal safety. Be especially careful that boot laces do not get hooked on the shooting house or its components (tuck shoelaces into boot before climbing). Failure to follow these instructions may result in serious injury or death!
-  **WARNING!** Prior to climbing, make sure all legs, ladder or supporting sections are firmly connected and locked. Make certain that none of the sections have come loose or separated. If they are, DO NOT USE THIS PRODUCT(S). With the help of three (3) other adults (four (4) total) lower the shooting house back down to the ground and secure the sections as appropriate and as outlined in this Manual. Failure to follow these instructions may result in serious injury or death!



WARNING! ALWAYS maintain three-point contact when climbing up or down. Proper three-point contact means having either two feet with one hand or one foot with two hands on the step portions at all times when climbing up or down. Failure to follow these instructions may result in serious injury or death!



WARNING! Prior to climbing, make sure all legs, ladder or supporting sections are firmly connected and locked. Make certain that none of the sections have come loose or separated. If they are, **DO NOT USE THIS PRODUCT(S)**. With the help of three (3) other adults (four (4) total) lower the shooting house back down to the ground and secure the sections as appropriate and as outlined in this Manual. Failure to follow these instructions may result in serious injury or death!



WARNING! BEFORE each use, make sure all nuts and bolts are secure. **CHECK** all hardware and webbing prior to every use to make sure that no damage has occurred to hardware and that webbing is not cut or frayed. Keep webbing from coming into contact with any sharp objects. **DO NOT USE THIS PRODUCT(S) IF ANY DAMAGE IS SUSPECTED**. Failure to follow these instructions may result in serious injury or death!

STEP 1: With the help of three (3) other adults (four (4) total), gently lift the standing platform of the shooting house and walk it up until erect.

STEP 2: Check to make sure the platform is on secure and level ground and the standing and seating platforms are level. If the platform is unlevel, adjust the two (2) adjustable bottom legs until the platform is level (as directed in these instructions). **NOTE:** Holes are provided in the feet to allow for staking (i.e., anchoring) to the ground for additional safety. Extreme precaution shall be used to ensure that the stand is stable prior to climbing. You must use the four (4) stakes provided to anchor the legs. These stakes provide a firm foundation for the shooting house when installed on level ground as detailed in these Instructions.



WARNING! You must secure your shooting house to preclude it from tipping or shifting during installation and/or use. Failure to follow these instructions may result in serious injury or death!



WARNING! Never attempt to level a platform by inserting, or using scrap lumber, rocks, tree limbs or branches, cardboard, or any other material(s). Under no circumstances shall you attempt to level your platform in a manner other than described in this Instruction Manual. Failure to follow these instructions will result in serious injury or death!

SPECIAL USE CONSIDERATIONS



WARNING! Caution **MUST BE EXERCISED** when entering or exiting the shooting house as you are stepping over the shooting house fabric covering. Attention must be paid not to trip over this shooting house fabric. Failure to follow these instructions may result in serious injury or death!



WARNING! NEVER ATTEMPT to use this M-300 Universal Platform when winds exceed 20 miles per hour. Abnormally high, gusty winds increase the risk of the shooting house toppling over. Failure to follow these instructions may result in serious injury or death!



WARNING! NEVER ATTEMPT to use this product without the legs secured with the provided stakes. Failure to follow these instructions may result in serious injury or death!



WARNING! When climbing, always maintain three points of contact as you ascend (climb up) and while descending (climb down). Failure to maintain three points of contact puts the user at serious risk of bodily injury. Failure to follow these instructions will result in serious injury or death!



WARNING! You must have four (4) adults to install or remove your shooting house. Failure to follow these instructions may result in serious injury or death!

STEP 1. With the help of three (3) other adults (four (4) total), remove the stakes from the legs and slowly tip the shooting house and walk it down to the ground.

CARE AND MAINTENANCE/WARRANTY

Your new Millennium Platform is factory finished with a state-of-the-art powder coating that guarantees years of trouble-free service. It is recommended that you store Universal Platform out of direct sunlight and out of any other harsh environmental condition(s) that may adversely affect its performance.

IMPORTANT WARRANTY INFORMATION

Millennium Outdoors, LLC warrants this Millennium product against defect(s) in material and workmanship, under proper use and storage for the period of one (1) year from the date of purchase. Proof of purchase, plus, the return of your warranty application card to our home office, is required for any warranty claim. In the event this product is found to be defective within the warranty period, Millennium Outdoors, LLC only obligation and your exclusive remedy shall be replacement or repair of any defective parts at our discretion. To obtain warranty service, please contact Millennium Outdoors, LLC customer service at (601) 932-5832. Exclusions to this warranty include seat, paint, plastics, fabrics, webbing and/or defects caused by operator misuse and/or abuse. Limitation to liability include the forgoing warranty is made in lieu of all other warranties, express or implied and Millennium Outdoors, LLC disclaims any implied warranty of merchantability and fitness. Millennium Outdoors, LLC shall not be liable for any damages direct, consequential or incidental arising out of the use or inability of this product.

WARRANTY APPLICATION CARD

I have read and understand the safety, assembly and operating instructions provided with my Millennium shooting house. I have read the warranty information and know that I can call Millennium at (601) 932-5832 with any questions or concerns that I may have about this or any other Millennium product(s). Mail to: Millennium Outdoors, LLC, 201 Fairmont Plaza, Pearl, MS 39208, (601) 932-5832.

NAME _____ PURCHASED WHERE _____

ADDRESS _____

CITY/STATE/ZIP _____

PURCHASE DATE _____

PRODUCT _____

EMAIL (Required) _____

Millennium Outdoors, LLC
201 Fairmont Plaza
Pearl, Mississippi 39208
(601) 932-5832
millenniumstands.com

