


## INSTALLATION INSTRUCTIONS FOR M-366 Foot Rest for M-360 Revolution.

## M-366 Foot Rest is for use on M-366 Revolution only.


1. Step one is to assemble the round tubing to the foot rest riser as seen in Image 1. Using four ¼ x 1-1/2" bolts and 4 cupped washer. NOTE: Leave the bolts just finger tight at this time, you can tighten after the foot rest is mounted to the platform.

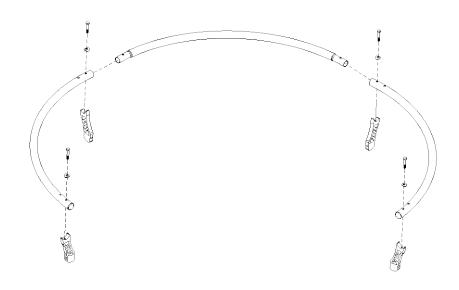

## (IMAGE 1)

2. Step two is install the foot rest risers to the platform as seen in Image 2, using four ¼" x 2-3/4" bolts, four ¼" x ¾" flat washers, four ¼" x ½" flat washers and four ny-loc nuts as seen in image 2.

Note: Again just finger tight until all bolts are installed.

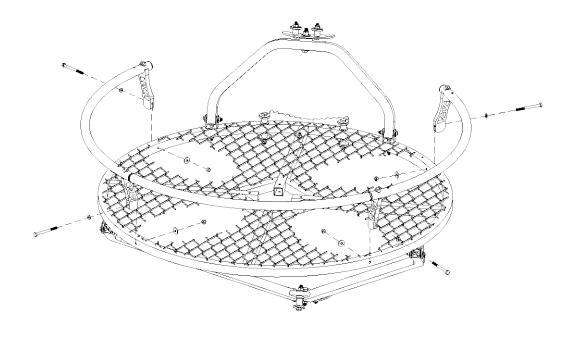


**(IMAGE 2)** 

3. Step 3. You can now tighten all the bolts and your foor rest is ready to use.

WARNING: Never stand on the foot rest as it is not designed to support your weight and could cause serious injury or death.



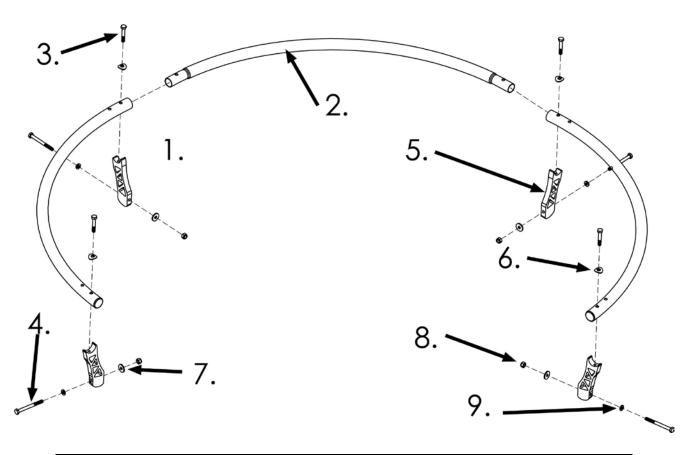

1	Side Tube	Z-366-01		2
2	<b>Center Tube</b>	Z-366-02		1
3	<b>Tubing to riser bolt</b>	Z-123-61	<sup>1</sup> / <sub>4</sub> "x1-1/2"	4
4	<b>Tubing to platform bolt</b>	<b>Z-123-60</b>	<sup>1</sup> / <sub>4</sub> "x 2-3/4"	4
5	Risers	Z-366-03		4
6	<b>Cupped washers</b>	<b>Z-123-62</b>	<sup>1</sup> / <sub>4</sub> x3/4"	4
7	Flat washer	Z-123-46	<sup>1</sup> / <sub>4</sub> " x3/4"	4
8	Ny-loc Nut	Z-123-31	1/4**	4
9	Flat washer	Z-123-63	<sup>1</sup> / <sub>4</sub> "x1/2"	4

If you have any questions please contact:

Millennium Outdoors 201 Fairmont Plaza Pearl, Ms 39208 Phone 601-932-5832 FAX 601-932-0068 www.millenniumstands.com



Millennium Outdoors, LLC 201 Fairmont Plaza Pearl, Mississippi 39208 (601) 932-5832 millenniumstands.com